

Front

SPECIFICATIONS

MATERIALS	ABS & Silicone
SIZE	220 x 46 x 46 mm
WEIGHT	~150 g
CHARGING TIME	2 Hours
USE TIME	Rose Vibration up to 1 Hour Stem Vibration up to 1 Hour Rose + Stem Vibration up to 30 Mins
BATTERY TYPE & CAPACITY	3.7V Li-ion / 430 mAh
VIBRATION MODES	5 Vibration Speeds & 10 Vibration Patterns

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

WARNING!

This item is sold as an adult novelty only. Item does not contain phthalates and it is recommended to use water-based lubricants. Should any irritation or discomfort occur, stop using this item immediately. The usage of this product is in no way a means to warrant any medical claims.

secret **SK** kisses
ROSEGASM





Lingo

Back

GETTING STARTED

1. Before first use, charge your device for approximately 2 hours. The Magnetic Magnetic USB charging cable can be plugged into any USB port of USB/AC power adapter (not included).

CHARGING = LED Light Flashing
FULLY CHARGED = Solid Light
LOW BATTERY = Rapid Flashing Light

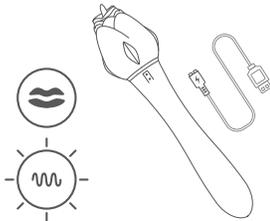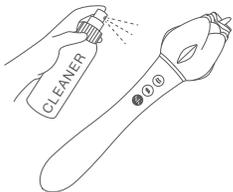

2. Wash your device with soap and water, or toy cleaner suitable for use with silicone items.

 
3. Lubricate your device with a water-based, silicone compatible lubricant.



4. Our products are designed to be waterproof. Your device can be used in the shower and can be run under water in the sink to be cleaned.

DO NOT immerse your device in water.

CONTROLS




LONG PRESS
to turn **ON/OFF**

SHORT PRESS
to **CHANGE MODES**

VIBRATION MODES

VIBRATION SPEEDS

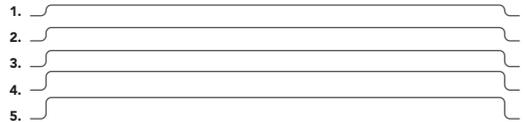

VIBRATION PATTERNS

