 
 


QUICK START GUIDE

SIZE

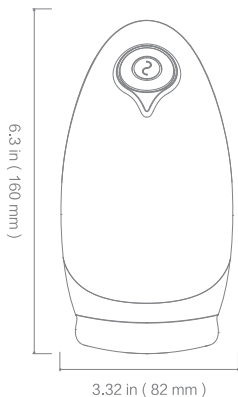

Function

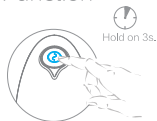 


- ON/OFF: Hold "Ⓢ" 3 seconds to turn on / off the product.
- Press "Ⓢ" button to Switch 9-frequency Vibrate mode




- Double-click "Ⓢ" button to control the heating function

HOW TO USE

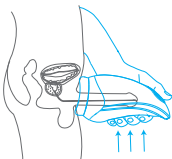

USB MAGNETIC CHARGING

 - ***WARNING: Please DO NOT** use adaptor with ">5V" output
- *Please make sure your toy is **fully charged while the first time**

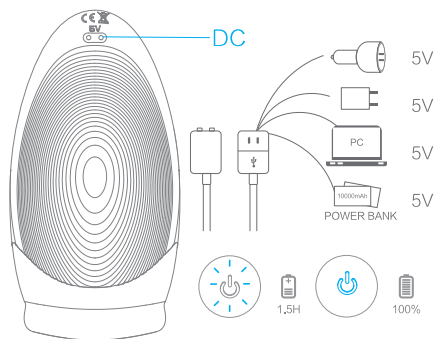

- Connect the device to USB port to charge.
- Do not use the device while charging.
- Can not keep in water for a long time.

PRODUCT CLEANING

- Clean Please clean product with warm water or antibacterial soap.
- Wipe Dry the product with clean cloth or towels.
- Save Keep the product in a cool, dry and clean place.
- Attention Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

SAFETY

- Do not use it at temperature over 167 F/75 C.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.

Certificates



MADE IN CHINA