

FRONT

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 7.8 x 3.82 x 1.54 (in)
IPX Rating: IPX7 Waterproof 30 min. immersion 3 ft.
Battery: Rechargeable
Charge Time: Do not exceed 180 minutes
Run Time: 60 minutes
Modes: 20



SECRETS


FORTE
VIBRATING RABBIT

For warranty information, latest products, and news visit us at:
nsnovelties.com

BACK

PLAY

- * Press & hold the top button for 2 seconds to power shaft vibration on/off.
- * Quick press the top button to cycle through the shaft speeds/functions.
- * Press & hold the bottom button for 2 seconds to power clitoral vibration on/off.
- * Quick press the bottom button to cycle through the clitoral speeds/functions.

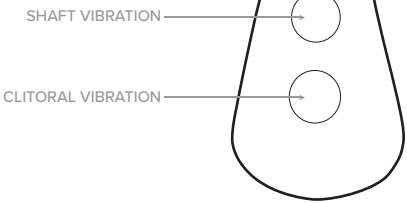

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

