

FRONT

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 4.53 x 1.38 x 2.32 (in)
IPX Rating: IPX3 Splashproof when tilted vertically up to 60 degrees
Battery: Rechargeable
Charge Time: Do not exceed 120 minutes
Run Time: 120 minutes
Modes: 10



LUST•N•DREAMS

TANGO


For warranty information, latest products, and news visit us at:
nsnovelties.net

BACK

PLAY

- * Press & hold the power button for 2 seconds to power on and enter standby mode.
- * Quick press the power button to cycle through speeds/functions.
- * Press & hold the power button for 2 seconds to power off.

POWER

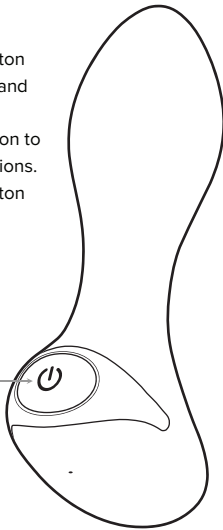

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

