

FRONT

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 4.53 x 1.57 x 1.57 (in)
IPX Rating: IPX5 Low pressure water resistant
Battery: Rechargeable
Charge Time: Do not exceed 90 minutes
Run Time: 50 minutes
Modes: 10



LUST·N·DREAMS


SALSA

For warranty information, latest products, and news visit us at:
nsnovelties.net

BACK

PLAY

- * Press & hold the power button for 3 seconds to power on/off.
- * Quick press the vibration button to cycle through speeds/functions.
- * Item will retain the last used setting after being powered off.

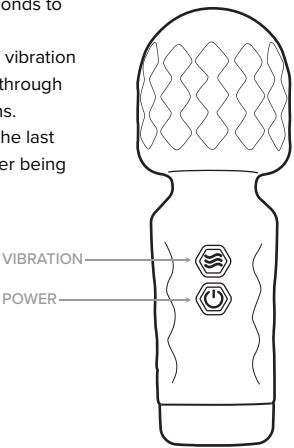

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

