FRONT

...-

- ★ Turn off device when not in use.
- $\ensuremath{\,\boldsymbol{\sharp}\,}$ Do not operate the device while charging.
- Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 5.43 x 2.01 x 1.81 (in)

IPX Rating: IPX6 High pressure water resistant

Battery: Rechargeable
Charge Time: Do not exceed 90 minutes
Run Time: 60 minutes

Modes: 10



GOLD - N - DREAMS

MILLIE

For warranty information, latest products, and news visit us at: $\begin{tabular}{ll} nsnovelties.net \end{tabular}$

BACK

PLAY

- Press & hold the power button for 2 seconds to power on/off.
- * Quick press the power button to activate and cycle through vibration modes.



CHARGE

- ★ The light will blink while the device is charging.
- The light will become solid once the device is fully charged.





