

FRONT

CARE

- \* Turn off device when not in use.
- \* Do not operate the device while charging.
- \* Please follow the charge times indicated in the device specifications.
- \* Wash after each use with liquid anti-bacterial soap and water.
- \* Pat dry with a cotton towel and allow to air dry completely.

**Product Dimensions:** 7.64 x 1.26 x 1.26 (in)  
**IPX Rating:** IPX7 Waterproof 30 min. immersion 3 ft.  
**Battery:** Rechargeable  
**Charge Time:** Do not exceed 120 minutes  
**Run Time:** 60 minutes  
**Modes:** 16



pretty in  
pink

ROSÉ

For warranty information, latest products, and news visit us at:  
[nsnovelties.net](http://nsnovelties.net)

BACK

PLAY

- \* Press & hold the M1 button for 2 seconds to power the wand on/off.
- \* Press & hold the M2 button for 2 seconds to power the shaft side on/off.
- \* Quick press the M1 or M2 button to cycle through the vibration modes.

M1 BUTTON → M1  
M2 BUTTON → M2



CHARGE

- \* The light will blink while the device is charging.
- \* The light will become solid once the device is fully charged.

