

FRONT

⑤

⑥

①

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 6.85 x 2.91 x 2.44 (in),
Remote: 2.76 x 1.38 x 0.59 (in)
IPX Rating: IPX7 Low pressure water resistant,
Remote: IPX0 No water protection
Battery: Rechargeable, Rechargeable
Charge Time: Do not exceed 110 minutes
Run Time: 70 minutes
Modes: 18



For warranty information, latest products, and news visit us at:
nsnovelties.net

GRINDERS

ROCKER
VIBRATING GRINDING PAD

BACK


②

③

④


PLAY

- * Press & hold the up arrow for 2 seconds to power on side one and enter standby mode.
- * Quick press the up arrow to cycle through the vibration modes on side one.
- * Press & hold the up arrow for 2 seconds to power off.
- * Press & hold the down arrow for 2 seconds to power on side two and enter standby mode.
- * Quick press the down arrow to cycle through the vibration modes on side two.
- * Press & hold the down arrow for 2 seconds to power off.

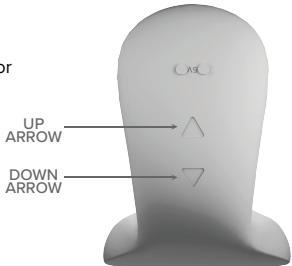

PLAY

- * While the device is in standby mode, quick press the vibration button on the remote to cycle through the vibration modes.
- * Press & hold the power button on the remote for 2 seconds to return to standby mode.

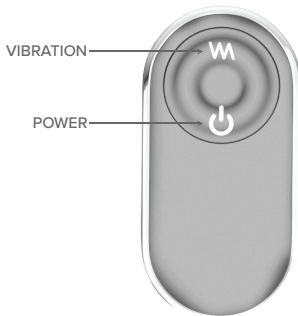

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

