


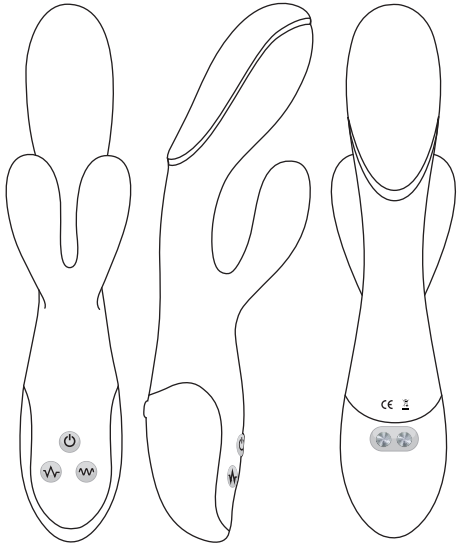

VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



Vibrator arrives with a partial charge, so it is advisable to charge before use for maximum experience.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. The toy operates at 3.7 volts and uses a li-ion battery.

Initial charge will take about 150 minutes, and subsequent charges take about 200 minutes to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but always unplug your toy when it's fully charged just to be safe.

Charge lasts for 50 minutes of play time at the highest setting, and about 90 minutes at lower settings.

This toy operates at a 50dB sound level.

USB RECHARGEABLE

