 




VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS: This vibrator arrives with an 80% charge, and it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 2.5 hours, and subsequent charges also take about 2.5 hours to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 70 minutes of play time on the lowest vibration level, and about 60 minutes of play time on the highest level.

Toy vibration slows before stopping completely when charge is low.

This toy operates at a sound level of 68 db

INSTRUCTIONS FOR USE: To turn toy on, press the power button for at least two seconds.

Once toy is turned on, use the bottom button to cycle through 7 different vibration & thrusting speeds in the tip of the shaft.

Use the top button to cycle through 7 different vibration speeds and functions in the clitoral piece.

To turn toy off, press power button for at least two seconds.

USB RECHARGEABLE

