

## **Product Specifications:**

Category: Vibrator User: Women Material: Silicone + ABS + Acrylic Finish: Silicone Finish: Silicone
Size: H: 211.2mm W: 55mm D: 40mm
Battery: Lithium Polymer Model :13450
Voltage: 3.7v
Number of Vibrations: 9 patterns of shaft, and 9 patterns of rabbit
User time: 80° 140 minutes Sound Level: <50dbs

## **CHARGING INSTRUCTIONS**

This vibrator arrives partially charged, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 130 minutes, and subsequent charges also take about 130 minutes to complete.

The red indicator light will flash slowly while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long pariods of time. periods of time.

Charge lasts for about 140 minutes of play time on the lowest vibration level, and about 80 minutes of play time on the highest level.

Toy vibration slows before stopping completely when charge is fully depleted.

This toy comes with a Li-ion rechargeable battery and operates at 3.7V. It vibrates at a sound level of 50 db.

INSTRUCTIONS FOR USE
This toy has a simple, two-button control. To turn toy
on, press the Power button for at least 3 seconds. The
LED light will turn on, and the toy will start with its first
pattern, a low vibration.

Once toy is turned on, press the function button to cycle through nine different patterns.



To turn toy off, press button for at least 3 seconds.