



## VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



### CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge, so it is recommended to fully charge before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 1 hour to complete, and subsequent charges will take about 3 hours to complete.

The indicator light will be on while device is charging, and turn off when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 4 hours of play time using one function, and about 1.3 hours using all three functions at once.

This toy operates at a sound level of less than 50db with a voltage of 3.7V. The battery operates at 1000mAh.

### INSTRUCTIONS FOR USE

This toy has an easy-to-use three button control panel.

Press the middle Power Button to turn the toy on by pressing it for at least 3 seconds. The LED lights will turn on.

Press this same middle Power Button more quickly to cycle through 10 different speeds of thrusting.

Press the top Shaft Function Button to switch between 10 different vibration speeds in the shaft.

Press the bottom Rabbit Function Button to switch between 10 different vibration speeds in the clitoral stimulator.

To turn toy off, press middle Power Button for at least 3 seconds.

USB RECHARGEABLE

