

## **Product Specifications:**

Category: Vibrator Category: Vibrator Material: silicone+ ABS Size: W: .94", H: 3.85", D: .94" Battery: 300mah Voltage: 3.7v Number of Vibrations: 4 speeds+ 7 patterns User time: 40 minutes Sound Level: 50db

CHARGING INSTRUCTIONS
This vibrating bullet arrives with a 70%-80% charge, so it is not necessary to charge before first use.
Connect the USB plug into the USB port of your computer or other output and insert the pin end of the DC charger directly inside the

toy's charger input socket at the base.
Initial charge will take about 30 minutes, and subsequent charges will take about 1 hour to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's not recommended to overcharge for long periods of

Charge lasts for about 1 hour of play time on the lowest level of vibration, and about 40 minutes on the highest level. When charge begins to deplete, vibrations will last about 10 minutes before stopping completely.

This toy operates at a <50db sound level with a 3.7V 300mAh Li-ion battery

USB RECHARGEABLE



INSTRUCTIONS FOR USE This toy has a convenient one-button control at its

To turn toy on, press the button for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the button a single time for each new sneed or

for each new speed or function for a total of 7. To turn toy off, press power button for at least 3 seconds.