

Product Specifications:

Category: Vibrator Material: Silicone + ABS Size: 109.71*30.23MM Battery: 651525, 3.7V 200mAh Voltage: 3.7V Number of Vibrations: 3 speeds + 7 vibrations User time: About 50 min Sound Level: <50dB

CHARGING INSTRUCTIONS This vibrator arrives with a partial charge, but it is recommended to charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 50 minutes, and subsequent charges will also take about 50 minutes to complete.

plete.
The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.
Charge lasts for about 75 minutes of play time on the lowest level of vibration, and about 45 minutes on the highest level minutes on the highest level.
Toy vibration reduces quickly when charge begins to deplete.
This toy operates at a sound level of 50db with a 3.7V battery INSTRUCTIONS FOR USE

This toy has a convenient two-button control on the handle – Power Button on the bottom, and

The nancie – Power Button on the bottom, and Function Button on the top. To turn toy on, press the bottom Power Button for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the top Function
Button a single time for each new speed or
function for a

USB RECHARGEABLE



total of 3. To turn toy off, press Power button for at least 3 seconds.