





Product Specifications:

Material: silicone+ABS Battery: Lithium ion Voltage: 3.7V Number of Vibrations: 7 User time: >60 minutes Sound Level: <60db

CHARGING INSTRUCTIONS: This vibrator arrives fully charged, so you can use it right

CHARGING INSTRUCTIONS: This vibrator arrives fully charged, so you can use it right out of the box.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 240 minutes, and subsequent charges also take 150 minutes to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time on the lowest vibration level, and about 90 minutes of play time on the lowest vibration level, and about 90 minutes of play time on the highest level.

Toy vibration slows before stopping completely when charge is fully depleted. This toy comes with a rechargeable battery and operates at 3.7V. It vibrates at a sound level of 60 db.



INSTRUCTIONS FOR USE: This toy has a three-button control and a turbo boost 'Max' button conveniently located on the hand grip.

To turn toy on, press the middle O Power button for at least 2 seconds. The white LED light will turn on, and the toy will start up in standby mode.

Use this same button pressed more quickly to initiate the licking / thumping sensation inside the channel, for a total of 3 speeds.

Use the Heating Function Button 1 initiate the heating function. There is only one heating temperature that reaches a low maximum for safety. The LED light turns red when the heating safety. The LED light turns red when the heating

sarety. The LEU light turns rea when the heating function is in operation.

Use the (\$\frac{7}{2}\$) button to initiate the stroker vibrations by pressing it for at least 2 seconds, cycling through a total of 7 speeds and functions. Hold down for 2 seconds to turn off.

When the toy is vibrating and licking, use the Turbo 'Max' MAX button to initiate a surge of pressions are a construction to the street for a construction. maximum power in both motors for an 'over the top' sensation. Click again to resume the previous pattern that was most recently in operation.

USB RECHARGEABLE



To turn toy off, press the middle O Power button for at least 2 seconds.