

<http://www.evolvednovelties.com/>

EVOLVED
Love is Back



Product Specifications:

Category: Vibrator

Material: Silicone+ABS

Size: Thruster: W: 2.23", H: 6.41", D: 2.23"

Bulby: W: 1.62", H: 6.46", D: 1.51"

G-Spot: W: 1.45", H: 6.46", D: 1.65"

Battery: 600mah, 2.22wh

Voltage: 3.7V

Number of Vibrations: 7 modes

User time: Battery life more than

1000 times

Sound Level: less than 60db



CHARGING ISTRUCTIONS

This vibrator arrives with a low partial charge of about 40%, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about three (3) hours, and subsequent charges will also take about three (3) hours to complete.

The indicator light will pulse off and on while device is charging, and light up solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about sixty (60) minutes of play time on the lowest level of vibration with fewer functions active at once, and about thirty (30) minutes on the highest level with all functions in use.

This toy operates at a sound level of 60db with an 600mAh battery, at a voltage of 3.7V.

INSTRUCTIONS FOR USE

This toy has three buttons at its base - Left, Middle, and Right. The Left button controls the light at the base, the Middle button controls thrusting, and the Right button controls vibration. Each function can be operated separately or together in any combination.

To operate the purple glowing light at the base, press the Left button for at least two (2) seconds. The light will illuminate and stay on until you turn it off by pressing the Left button again for at least two (2) seconds.

To engage the thrusting motor, press the Middle button for at least two (2) seconds. Toy will begin thrusting at its first thrusting speed. Press the button again more quickly to cycle through seven (7) thrusting speeds and patterns. Press the Middle button again for at least two (2) seconds to turn thrusting motor off.

To engage the vibration motor, press the Right button for at least two (2) seconds. Toy will begin vibrating at its lowest speed. Press the button again more quickly to cycle through seven (7) vibration speeds and patterns. Press the Right button again for at least two (2) seconds to turn vibration motor off.

Suction cup mount: To use the suction cup mount, screw the end of the toy onto the screw mount of the suction cup bracket until just tight. Do not turn past a comfortable tension. You may screw the toy on first and then place the bracket onto a surface for use, or you may engage the suction cup base first and then screw the toy onto it.

USB RECHARGEABLE

