

<http://www.evolvednovelties.com/>

**EVOLVED**  
*Love is Back*



**Product Specifications:**

Material: Silicone & ABS  
Battery: built-in Li battery  
Voltage: 7.4V  
Number of Vibrations: 10  
User time: 1 hour  
Sound Level: <70DB

**CHARGING INSTRUCTIONS**

This vibrator arrives with a partial charge of about 70% and may be used immediately, directly out of the box.

To charge, connect the USB plug into the USB port of your computer or other output and the double magnetic prong end of the DC charger into input at base of toy.

Initial charge will take about 3 hours, and subsequent charges will also take about 3 hours to complete.

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time on the lowest level of vibration, and about 45 minutes on the highest level.

This toy operates at a sound level of less than 70db with a rechargeable lithium battery at 7.4V.

The remote control operates with 2 x AAA batteries.

**INSTRUCTIONS FOR USE**

This toy has a convenient 1-button control at its base, and a 2-button control on the remote.

The toy must be turned on with the button located directly on the toy. This puts the toy in standby mode, after which you can operate the vibrations either with the remote or directly on the toy.

**OPERATE WITH BUTTON ON TOY:**

To turn toy on, press the Power Button for at least 2 seconds. The light on toy will turn on and go into standby mode.

Once the toy is in standby mode, press the Power Button again, a single time for each new speed or function for a total of 10.

To turn toy off, press Power Button for at least 2 seconds.

Note: Once the toy is turned on, it can be operated via remote control, including standby mode.

**OPERATE WITH CONTROL:**

To turn toy on, press the Power Button ON THE TOY for at least 2 seconds. The light on toy will turn on and go into standby mode.

Once the toy has been turned on, the remote control can be used to cycle through 10 vibrations and functions by using the Top Button.

The Bottom Button on the remote control operates the standby mode. Once the toy is engaged and vibrating, press the Bottom Button to stop vibration and function

INSERT  
CHARGER  
HERE



completely, entering standby mode. To exit standby mode and resume vibration, use the Top Button to choose the desired speed.

To turn toy off, press Power Button ON THE TOY for at least 2 seconds.