

<http://www.genderx.com/>

**GENDER** X



**Product Specifications:**

Material: Silicone + ABS  
Battery: Lithium Battery  
Voltage: 3.7 V  
Number of Vibrations:  
Thrusting 3 speeds,  
10 vibrating patterns  
User time: 60 minutes  
Sound Level: < 58dp

**CHARGING INSTRUCTIONS**

This vibrator arrives with a partial charge, so it is recommended to charge it fully before first use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC magnetic charger onto the toy's two magnetic charging pins located at the back of the toy's base.

The battery will charge fully in about 150 minutes. Initial charge will take about 40 minutes. The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 80 minutes of play time with the lowest level of vibration, and 60 minutes with the highest level of vibration.

This toy operates at a sound level of less than 58db and a voltage of 3.7V with a lithium battery.

**INSTRUCTIONS FOR USE**

This toy has a three-button control panel at its base. The Power Button (middle button) turns the toy on and off, which simultaneously puts the thrusting function into its lowest speed and puts the rabbit stimulator into standby mode. The Thrusting Button (top button) controls the thrusting motion at the tip of the main shaft, and the Vibration Button (bottom button) controls the vibrations in the rabbit stimulator.

To turn the toy on, press the Power Button (middle button) for at least three (3) seconds. The buttons will light up, and thrusting will begin at its lowest speed.

Once the toy is powered up, change the thrusting speed by pressing the Thrusting Button (top button). Each press will advance to the next speed or function for a total of three (3). To turn the thrusting function off, press the Thrusting Button for at least three (3) seconds.

To activate the rabbit vibration motor, make sure the toy is powered on, then press the Vibration Button (bottom button) once. Press the button again to cycle through 10 vibration speeds and functions. To turn the vibration motor off, press the Vibration Button for at least three (3) seconds.

To turn the toy off, press the Power Button (middle button) for at least three (3) seconds. The LED light will go dark, and all vibrations and thrusting will stop.

ATTACH USB CHARGER TO PRONGS



USB RECHARGEABLE