



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, so it recommended to charge it for at about 30 minutes before use. It does not need to be fully charged before first use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into the toy's 2-pronged magnetic input, which is at the back of the toy's base.

The battery will charge fully in about 200 minutes. The initial charge may be less, and it is not necessary to charge it more than 30 minutes before first use.

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 110 minutes of play time with the lowest level of vibration, and 90 minutes with the highest level of vibration. This toy operates at a sound level of less than 60db and a voltage of 3.7V – 5V with a lithium battery.

INSTRUCTIONS FOR USE

This toy has a four-button control panel at its base. The Power Button (bottom button) turns the toy on and off. The Rabbit Button (right button) controls the clitoral stimulator, the Thrusting/Exploding Button (top button) operates the thrusting and "exploding" in the main shaft, and the Turbo Mode Button (left button) operates Turbo Mode. The motors are controlled independently and can be enjoyed together.

To turn the toy on, press the Power Button (bottom button) for at least three (3) seconds. This will put the toy in standby mode, and the LED light will illuminate the control panel.

Once the toy is powered up, activate the rabbit clitoral shaft motor by pressing the Rabbit Button (right button). Each press will advance to the next speed or function for a total of seven (7). Press the Rabbit Button for three (3) seconds again to turn its motor off.

To activate the thrusting/exploding motor, pressing the Thrusting/Exploding Button (top button). Each press will advance to the next speed or function for a total of three (3). The thrusting and exploding functions work together. Pressing the Thrusting/Exploding Button again for three (3) seconds to turn these functions off.

To activate Turbo Mode, press the Turbo Mode Button (left button) once. Turbo Mode engages all motors and functions at their highest speeds. No matter what speed the toy is currently set to, pressing this button will cause the rabbit stimulator, thruster and exploding bead function to go directly to their highest speed or intensity. Press the button again to exit Turbo Mode.

To turn the toy off, press the Power Button (bottom button) for at least three (3) seconds.

The LED light will go dark, and all vibrations will stop.

ATTACH USB
CHARGER
TO PRONGS

USB
RECHARGEABLE