



## VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.

### CHARGING INSTRUCTIONS

This vibrator arrives with a high partial charge of about 70%, so it can be used immediately. It is recommended to use up initial charge before recharging for the first time.

To charge, connect the USB plug into the USB port of your computer or other output and the DC charger into the port at the toy's base.

Initial and subsequent charges will take about 1.5 hours to complete.

The indicator light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 45 minutes of play time at the highest level of vibration and about 60 minutes at the lowest level.

This toy operates at a sound level of less than 50db with a rechargeable 160mAh lithium battery at 3.7V. The remote uses 1 CR2032 battery, included.

### INSTRUCTIONS FOR USE

This toy can be operated with the remote control or directly on the toy. Note: The remote cannot turn the toy on – you must use the toy's button initially to power up. The intensity function can ONLY be operated via remote, not with toy button.

To operate the toy directly, use the 1-button control at the side of the vibrating bullet. Turn the toy on by pressing the button for at least 3 seconds. The light will turn on and toy will be in standby mode. Press the button again and the toy will start vibrating at its first lowest frequency. To switch speeds, press the button a single time for each new speed or function for a total of 10. To turn toy off, press button for at least 3 seconds. This button cannot operate the intensity function.

To operate with the remote control, turn on the remote with the Power button in the center.

Press the right Wave button to change vibration patterns, 10 in total. Use the left Wave button to go back to the previous speed or function. Use the plus and minus buttons at the top and bottom of the remote to increase or decrease the intensity of any speed or function. Turn the remote off by pressing the center Power button for 3 seconds. Note: Toy must be turned off separately; remote cannot turn toy on or off.



INSERT  
CHARGER  
HERE

USB RECHARGEABLE

