

<http://www.genderx.com/>

**GENDER X**



**Product Specifications:**

Material: ABS Plastic  
Battery: 751525/ 240mAh  
Voltage: 5V  
Number of Vibrations: 10  
User time: 1.5 hours-2 hours  
Sound Level: 45db

**CHARGING INSTRUCTIONS**

This toy arrives with a high partial charge of about 80%, so it may be used immediately or charged fully before first use. To charge, connect the USB plug into the USB port of your computer or other output and the magnetic DC charger end onto the two magnetic pins at the base of the toy.

Initial charge takes about 30 minutes and subsequent charges will take about 90 minutes to complete.

The indicator light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 1.5 hours of play time at the highest level of vibration and about 2 hours at the lowest level.

This toy operates at a sound level of less than 45db with a rechargeable 240mAh lithium battery at 3.7V.

The remote control uses a 2032 button cell battery, included.



**INSTRUCTIONS FOR USE**

This toy can be operated with the 1-button control at its base, or the 1-button control on the remote control.


To turn toy on, press the Power Button at the base of the toy for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency. At this point, you may also turn on the remote control by pressing its button for at least 3 seconds.

Once the toy is on, press the Power Button on the toy again to change speeds and functions, a single time for each, for a total of 10. Or, you may use the button on the remote control, pressing a single time for each of the 10 speeds and functions.

To put the toy in standby mode with the remote control, press the button on the remote for at least 3 seconds. The toy will enter standby mode and the remote control will power off.

To turn toy off, press Power Button on toy for at least 3 seconds.

ATTACH USB CHARGER TO PRONGS

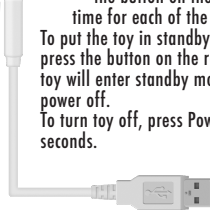

**USB RECHARGEABLE**