

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: silicone and ABS

Battery: LiCoMnNiO2

Voltage: 3.7-4.2 V

Number of Vibrations: 10

User time: 60-80 MINS

Sound Level: ≤58dB/10cm

CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge so it is recommended to charge the toy for about 30 minutes before first use. To charge, connect the USB cable to your computer port or other DC source, and the magnetic end onto the magnetic pins at the base of the toy.



The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Initial charge will take about 30 minutes and subsequent charges will take about 2 hours to complete.

Charge lasts for about 50 minutes of play time at the highest level of vibration and about 60 minutes at the lowest level.

This toy operates at a sound level of between 58db with a rechargeable lithium battery at 3.7V-4.2V.

INSTRUCTIONS FOR USE

This light-up vibrating bullet has a convenient 2-button control at its base. Each button controls its own motor.

To turn on the wand end motor, press the Power Button for 2 to 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 10.

To turn toy off, press Power Button for 2 to 3 seconds.

ATTACH USB CHARGER TO PRONGS



USB RECHARGEABLE