

Product Specifications:

Material: Black chrome Battery: NBP-452937 300mah

Voltage: DC 3.7V Number of Vibrations:

10 Functions

User time: 50 mins. Sound Level: 50 db

CHARGING INSTRUCTIONS

This vibrator arrives partially charged, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.
Initial charge will take about 40 minutes, and subsequent charges will take about

Initial charge will take about 40 minutes, and subsequent charges will take abou 99 minutes to complete.

The Red LED light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 118 minutes of play time on the lowest vibration level, and about 70 minutes of play time on the highest level.

Toy vibration slows before stopping completely when charge is

nigness revei.
Toy vibration slows before stopping completely when charge is fully depleted.
This toy operates at a sound level of 50db and a power level of 3.7 with a 300mAh battery.
INSTRUCTIONS FOR USE

INSTRUCTIONS FOR USE

Before using the toy, you need to unlock Travel Lock mode.

Press the Power Button at base for 2.5 seconds. The motor will vibrate twice and the red LED light will flash twice to indicate that the toy is turned on. After the second light flash, the light will go off and the toy will be out of Travel Lock mode and into standby mode.

Once the toy is in standby mode, press the Power Button more quickly and it will begin to vibrate at its lowest speed.

Press the Power Button again quickly to cycle through 10 motor modes. The light will flash once every time you switch to a new speed or function.

Press the Power Button for 1.5 seconds to turn the toy off. The light will turn off and the vibration will quit. Now the toy is back in standby mode.

To lock the toy again, press the Power Button for 3 seconds. The motor will vibrate twice and the red LED light will flash

and the red LED light will flash twice. This puts the toy into Travel Lock mode for storage.

USB RECHARGEABLE