Product Specifications:

Material: Liquid silicone Battery: 902040-700mAh

Voltage: 3.7V

Number of Vibrations: 10 User time: 60 minutes Sound Level: 45 Dbs

CHARGING INSTRUCTIONS

This toy arrives with a high partial charge of between 50-60%. It is recommended to charge fully before first use to extend battery life. To charge, connect the USB plug into the USB port of your computer or other output and the DC charger into the port at the base of the handle of the toy. Initial charge will take about 2 hours and subsequent charges will

take about 90 minutes to complete.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 50-60 minutes of play time at the highest level of vibration, and about 60-80 minutes at the lowest level. This toy operates at a sound level of less than

45db with a 700mAh rechargeable lithium battery at 3.7V.

INSTRUCTIONS ON USE

This toy has a convenient 1-button control at the front of its handle.

To turn toy on, press the button for at least 1.5 seconds. The LED light will turn on and toy will

begin vibrating at its first lowest frequency. Press the button again, a single time for each new speed or function for a total of 10. To turn toy off, press button for at least 1.5 seconds.

USB RECHARGEABLE 🛅

INSERT CHARGER HERE