



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.

CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge, so it is recommended to charge before first use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger port located at the base of the back of the toy's handle. Initial and subsequent charges will take about one hour to complete. The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 50 minutes of play time on the lowest level of vibration and function and 60 minutes on the highest level. This toy operates at a sound level of 55db at a voltage of 3.7V.

INSTRUCTIONS FOR USE

This toy is operated with an easy-to-use 3-button panel located at the bottom of the front handle. Press the top power button for at least 2 seconds to turn the toy on. The LED light will illuminate, and the toy will begin in standby mode. Press the left vibration button to engage the vibrating motor near the head of the main shaft. Its light will go on and vibration will begin at its lowest speed. Press the button again more quickly to cycle through 8 speeds of vibration and OFF. Press the right 'side to side' button to engage the motor in the smaller rabbit shaft. Its light will go on and side to side motion will begin at its lowest speed. Press the button again more quickly to cycle through 3 speeds of side-to-side motion and OFF.

