

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: Li-ion battery, 3.7V/240mAh
Voltage: 5V
Number of Vibrations: 9
User time: 40-75 minutes
Sound Level: <50dbs

ATTACH
CHARGER
HERE



USB
RECHARGEABLE

CHARGING INSTRUCTIONS

This vibrator arrives with partial charge, so it is recommended to charge fully before first use. Connect the USB plug into your USB power source and the other end of the DC charger onto the toy's magnetic charging pins, located at the bottom of the rose.

Initial and subsequent charges will take about 50 minutes to complete.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 75 minutes on the lowest vibration function and about 40 minutes on the highest vibration function.

This toy operates at a sound level of about 50db with a 240mAh lithium battery at a working voltage of 3.7 and a charging voltage of 5V.

INSTRUCTIONS FOR USE

This tongue-flicking rose toy is operated with a 2-button panel located on the side of the rose blossom. The bottom button (upside down blossom with wavy line underneath) turns the toy on or off. The top button (right side up blossom) operates the motor's vibration and flicking function, which work simultaneously.

Press the bottom button for at least 3 seconds to turn on the motor. The LED light will go on and the motor will begin at its lowest vibration and flicking level. Press the top button to cycle through a total of 9 vibration speeds and rhythms. Press the bottom button again for 3 seconds to turn the motor off. Both functions will cease, and the lights will turn off.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY
AND MUST BE RECYCLED



Li-ion