

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: Silicone & ABS
Battery: 420mah
Voltage: 3.7V
Number of Vibrations:
7 vibrating &
5 rotation swing modes
User time: 77-120 Minutes
Sound Level: <50DB

CHARGING INSTRUCTIONS

This vibrator arrives with a high partial charge, so it is not necessary to charge before first use.

Connect the USB plug into a power source, and the other end of the charger into the toy's DC port, located on the top of the base.

Initial and subsequent charges will take about 90 minutes to complete.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 120 minutes of play time on the lowest levels of vibration and rotation, and 77 minutes on the highest levels.

This toy operates at a sound level of about 50db with a 420mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This vibrator operates with a 2-button panel located at the bottom of the base. Each button controls a separate motor with its own on/off function.

Press the wavy line button for at least 2 seconds to turn on the toy's vibration function. The button will light up and toy will begin vibrating at its lowest speed. Press this button again more quickly to cycle through 7 speeds and patterns of vibration. Press again for at least 2 seconds to turn this motor off.

Press the circular arrow button for at least 2 seconds to turn on the toy's rotating function. The button will light up and balls will begin rotating at their lowest speed. Press this button again more quickly to cycle through 5 speeds and directions of rotation. Press again for at least 2 seconds to turn this motor off.

