

CHARGING INSTRUCTIONS
It is recommended to fully charge this toy before use.
Connect the USP blug into a power source and the other end of the DC charger onto the magnetic charging pins below the 1-button control panel at the front of the toy.
Initial and subsequent charges will take about 1 hours to complete.
Initial and subsequent charges will take about 1 hours to complete.
The indicator bejin will fasts not only while abovie is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.
Charge lasts for about 90 minutes of play time on average.
This toy operates at a sound level of less than 550 with a 650mAh lithium battery at a voltage of 3.7V.
The remote control uses 1 AAA battery, not included.

INSTRUCTIONS FOR USE

INSTRUCTIONS FOR USE

This toy can be operated directly with the button on the front of the toy, or with the three buttons on its remote control.

Important note: You cannot turn the toy ON or OFF with the remote control. Use the button directly on the toy to power it on.

OFERATE WITH TOY DIRECTLY

Press: the single button or the front of the toy for at least 3 seconds to turn toy on. The light will illuminate and both motors will be in standby mode. Press the button again more quickly to cycle through 5 different vibration and sucking speeds and patterns in both motors or once, including off. In turn toy off, press button for at least 3 seconds.

Once the toy is on, you may power on the remote and use its buttons to operate vibrations and sucking functions separately.

OPERATE WITH REMOTE CONTROL.

In both motors of one, including off. Io furn toy off, press southor of a least 3 seconds. Once the toy is on, you may power on the remote and use its buttons to perfect birdrions and sucking functions separately. OPERIE WITH REMOTE CONTROL.

Once the toy is on (by using the button on toy directly), press the top Mouth (Power / Sucking) Button on the remote for at least 2 seconds to turn it on. Press this button again more quickly to engage the suction function in the inner channels. Press again to you'de through 5 sucking patterns in all its well as standly. Once toy and remote have been turned on, press the bottom Without on in the for a feet 2 seconds to engage the vibration in the inner channels. Press again more quickly to cycle through 5 different without on remote for a feet 2 seconds to engage the vibration in the inner channels. Press one of suction will immediately release and stoy.

Press the top Mouth Power Button again for 2 seconds to turn the remote off and put the toy in standby mode (no matter what speed if son).

LEAMING INSTRUCTIONS

There are two air intake holes at the toy smooth surface of this toy that are used to facilitate drainage and pressure release in the inner channels. Attention: Do not block these intake holes at the vaginal channel. Machinic to an official of a remove the control of the size of the surface of the toy. ATTACH USB CHARGER TO PRONGS