

Product Specifications:

Material: Silicone & ABS Battery: Lithium battery

Voltage: 3.7V

Number of Vibrations: 12 User time: 40 - 65 Minutes Sound Level: ≤65DB

CHARGING INSTRUCTIONS

It is recommended to fully charge this toy before first use. Initial charge will complete in about 2 hours. Subsequent charges will complete in about an hour. Connect the USB cable to a power source at one end and plug the other end into the port at the back of the toy's base. An indicator light means the toy is charging.

Battery charge lasts for about 65 minutes on the lowest frequency, and about 40 minutes on the highest frequency. This toy operates at a sound level of less than 65db at 3.7V.



- Press the power button for 1.5 seconds to turn the toy on. The light will turn on and both motors will begin in standby.
 - 2. Press the function button to engage both motors simultaneously. Vibration and flicking will begin at their lowest speeds. Press the button again to cycle through 12 speeds and functions, then back to standby.
 - 3. Press the power button for 1.5 seconds to turn the toy off. The light will turn off and both motors will stop.