

**Product Specifications:** 

Material: Silicone & ABS Battery: 1 AAA battery Voltage: 1.5V Number of Vibrations: 7 Sound Level: 50db



## **CHARGING INSTRUCTIONS**

This toy operates with one AAA cell battery, not included. The battery compartment is located at the base of the toy, inside the handle. Twist the handle to the left to open the compartment and slide in the battery before closing tightly. This toy operates at a sound level of less than 50db.

## **INSTRUCTIONS FOR USE**

- 1. Press the button at the side of the toy's base for 1.5 seconds to turn toy on. The button will light up and toy will begin vibrating at its first lowest frequency.
- 2. Press button again for 0.5 seconds at a time to cycle through 7 speeds and patterns.
  3. To turn toy off, press button for at 1.5 seconds.