

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: 601138 /185mAh
Voltage: 3.7V
Number of Vibrations: 10
User time: 50 - 60 Minutes
Sound Level: ≤50DB



USB
RECHARGEABLE

CHARGING INSTRUCTIONS

This toy arrives with a 70% charge, so it can be used immediately. Charges will take about an hour to complete. To charge, connect the USB plug into a power source at one end, and the DC charger onto the magnetic charging pins at the back of the ringed handle.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time. Charge lasts for about 50 minutes of play time at the highest level and about 60 minutes at the lowest level. This toy operates at a sound level of less than 50db with a rechargeable 185mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

1. The control button is located at the side of the ringed handle.
2. Press the button for 3 seconds to turn toy on. The button will light up and the motor will begin at its lowest frequency.
3. Press the button again more quickly to cycle through 10 vibrating speeds and rhythms.
4. To turn the toy off, press the button for 3 seconds. The light will turn off and the motor will cease.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

