

Product Specifications:

Material: Silicone & Aluminum Alloy Battery: Li-ion battery YL701435,320mAh, 1.184Wh,6.0g Voltage: 3.7V Number of Vibrations: 7 User time: 50 - 100 Minutes Sound Level: <60Db

CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge of about 30%. It is recommended to use up this energy and then charge battery completely the first three to use up this energy and then charge battery completely the first three times to maximize battery life.

To charge, connect the USB plug into the USB port of your computer or other output and the magnetic DC charger into the two magnetic pins at the toy's base.

Initial and subsequent charges will take about 120

minutes to complete.
The indicator light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of

Charge lasts for about 50 minutes of play time at the highest level of vibration and about 100 minutes at the lowest level.

This toy operates at a sound level of 60db and lower with a rechargeable 320mAh lithium battery at

INSTRUCTIONS FOR USE

This toy hos a convenient 1-button control at its

To turn toy on, press the Power Button once, the lights will turn on and toy will begin vibrating al its

ATTACH USB CHARGER TO PRONGS

first lowest frequency.

Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 7.

To turn toy off, press Power Button for at least 3 seconds.

USB RECHARGEABLE