

**Product Specifications:** 

Material: TPE rubber Battery: 2 AA batteries Sound Level: <50db



## INSTRUCTIONS FOR USE

- 1. Insert batteries and twist cap into locking position.
- 2. Turn cap to the right to start vibration and keep twisting to the right to increase vibration speed.
- 3. Turn cap all the way to the left to turn toy off.

UNSCEW CAP AND INSERT 2 AA BATTERIES HERE