

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: Silicone & ABS
Battery: Lithium Polymer
Voltage: 3.7V
Number of Vibrations: 10
User time: 50 - 60 Minutes
Sound Level: <60db

CHARGING INSTRUCTIONS

It is recommended to charge battery fully before first use. To charge, connect the USB plug into a power source at one end and the other end onto the magnetic charging pins at the bottom of the toy's base. The LED light will flash while the device is charging and remain solid when fully charged. Initial charge will take 150 minutes, subsequent charges will take 120 minutes to complete.

Charge lasts for about 60 minutes of play time on the lowest vibration level, and about 50 minutes of play time on the highest level. This toy operates at a sound level of 60db with a 500mAh lithium polymer battery at 3.7V.

INSTRUCTIONS FOR USE

1. The control button is located at the bottom of the toy's base.
2. Press the button for 3 seconds to turn the toy on. The button will light up to indicate that the motor is in standby mode.
3. Press the button again more quickly to cycle through 10 tapping speeds and patterns.
4. To turn the toy off, press the button for 3 seconds. The light will turn off and the motors will cease.
5. Turn on the remote control by pressing the power button, then press the vibration button more quickly to cycle through 10 tapping speeds and patterns. Press the power button to put into standby. Turn off the remote by pressing the button again for 3 seconds.
6. The remote cannot turn the toy on or off. The toy must be turned on and off with its own button directly.

