

<http://www.evolvednovelties.com/>

EVOLVED
Love is Back



Product Specifications:

Material: Silicone & ABS
Battery: 952730B 750mAh
Voltage: 3.7V
Number of Functions:
8 vibrating, 5 waving
User time: 60 -90 Minutes
Sound Level: ≤60dB

Charging Instructions

It is recommended to fully charge the battery before first use. To charge, connect the USB plug into a power source at one end and the magnetic end onto the charging pins at the side of the toy's base. The LED light will flash while the device is charging and remain solid when fully charged. Initial charge will take about an hour, subsequent charges about 2 hours to complete.

Charge lasts for about 90 minutes of play time on the lowest vibration level, and about 60 minutes of play time on the highest level. This toy operates at a sound level of 60db with a 750mAh lithium polymer battery at 3.7V.

INSTRUCTIONS FOR USE

1. The toy's control button is located at the front of the toy's base. Press for 2 seconds to turn the toy on. The button will light up and both motors will begin in standby.
2. Press the button again more quickly to engage the waving function, cycling through 5 waving speeds and patterns. The toy's button cannot control vibration in the head.
3. On the remote, press the center power button for at least 2 seconds to turn it on. The button will light up and the remote will begin in standby.
4. Once the remote is in standby, press the top wavy line button to engage vibration in the head of the shaft. Press again to cycle through 8 vibration speeds and patterns.
5. Once the remote is in standby, press the bottom circle button to engage waving in the shaft. Press again to cycle through 5 waving speeds and patterns.
6. To turn the remote off, press the center power button for 2 seconds. The light will turn off and the motors will cease.
7. To turn the toy on or off completely, use the toy's direct button. The remote can only operate the toy once it's been turned on directly.



ATTACH USB
CHARGER
TO PRONGS

USB RECHARGEABLE